

Installation Instructions

LICC-106SG

Please read carefully and save these instructions

WARNING: ALL INSTALLATION WORK SHOULD BE DONE BY ACCREDITED PROFESSIONAL. SHUT OFF POWER SUPPLY AT FUSE OR CIRCUIT BREAKER!

PREPARING FOR INSTALLATION

- 1.Carefully remove all contents from the carton. See the important notes above. Shut off the power at the circuit breaker and completely remove the old fixture from the ceiling, including the old mounting plate. Remove the mounting plate assembly from the bag.
2. Remove the mounting strap assembly from the bag. One end of the threaded post (D) should be attached to the mounting bracket (A) with a washer and a hex nut (B, C) in place. The other end should have canopy loop (H) attached. Attach mounting bracket (A) to the junction box by securely tightening the mounting screws (F). Unscrew canopy loop ring (I) from canopy loop (H). Pass canopy (G) over the canopy loop (H) so that it's against the ceiling. Adjust position of threaded post (D) on mounting bracket (A) so that canopy (G) covers at least half of the exterior threads on the canopy loop (H) while it's securely connected to threaded post (D). Once ideal position of threaded post (D) is determined, tighten up the washer (B) and hex nut (C) on the threaded post (D) right underneath the mounting bracket (A) to secure the threaded post in place.

ASSEMBLING THE FIXTURE

3. Lock the rod hooks (O) (Q) into loops (N) (R). Keep the weight of the fixture on column (M) when installing rods, otherwise, the hooks (O) (Q) and rods (P) will disconnect from the loops. Determine the correct number of chain links needed for proper hanging height. Use a pair of pliers to open and remove or add any excess chain. Attach one chain connector (J) to each end of chain (K). Use one of chain connectors (J) to attach chain (K) to top loop (L) and close the chain connector. Feed the fixture wires up through the chain (every three links or so), pulling the wires until taut. Slide canopy loop collar (I) and canopy (H) onto the chain/ wire. Use the remaining chain connector (J) to attach chain (K) to canopy loop (H).

CONNECTING THE WIRES

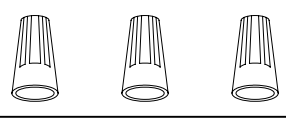
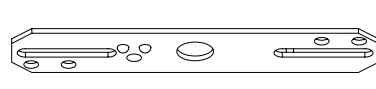
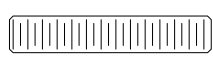
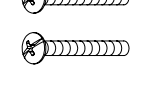
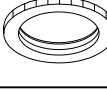
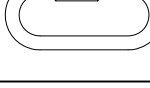
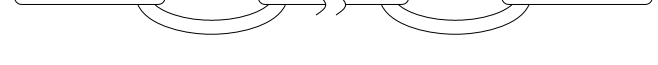
4. Feed the fixture's wires through canopy loop (H) and threaded post (D), Strip 3/8"of insulation from the wire ends. Using wire connector (AA), connect RIBBED fixture wire to the WHITE supply wire from the junction box; connect the SMOOTH fixture wire to the BLACK supply wire. Connect the fixture ground wire and supply ground wire using a wire connector or by fastening to the ground screw (E) on the mounting plate. Push all wire connections into the junction box.

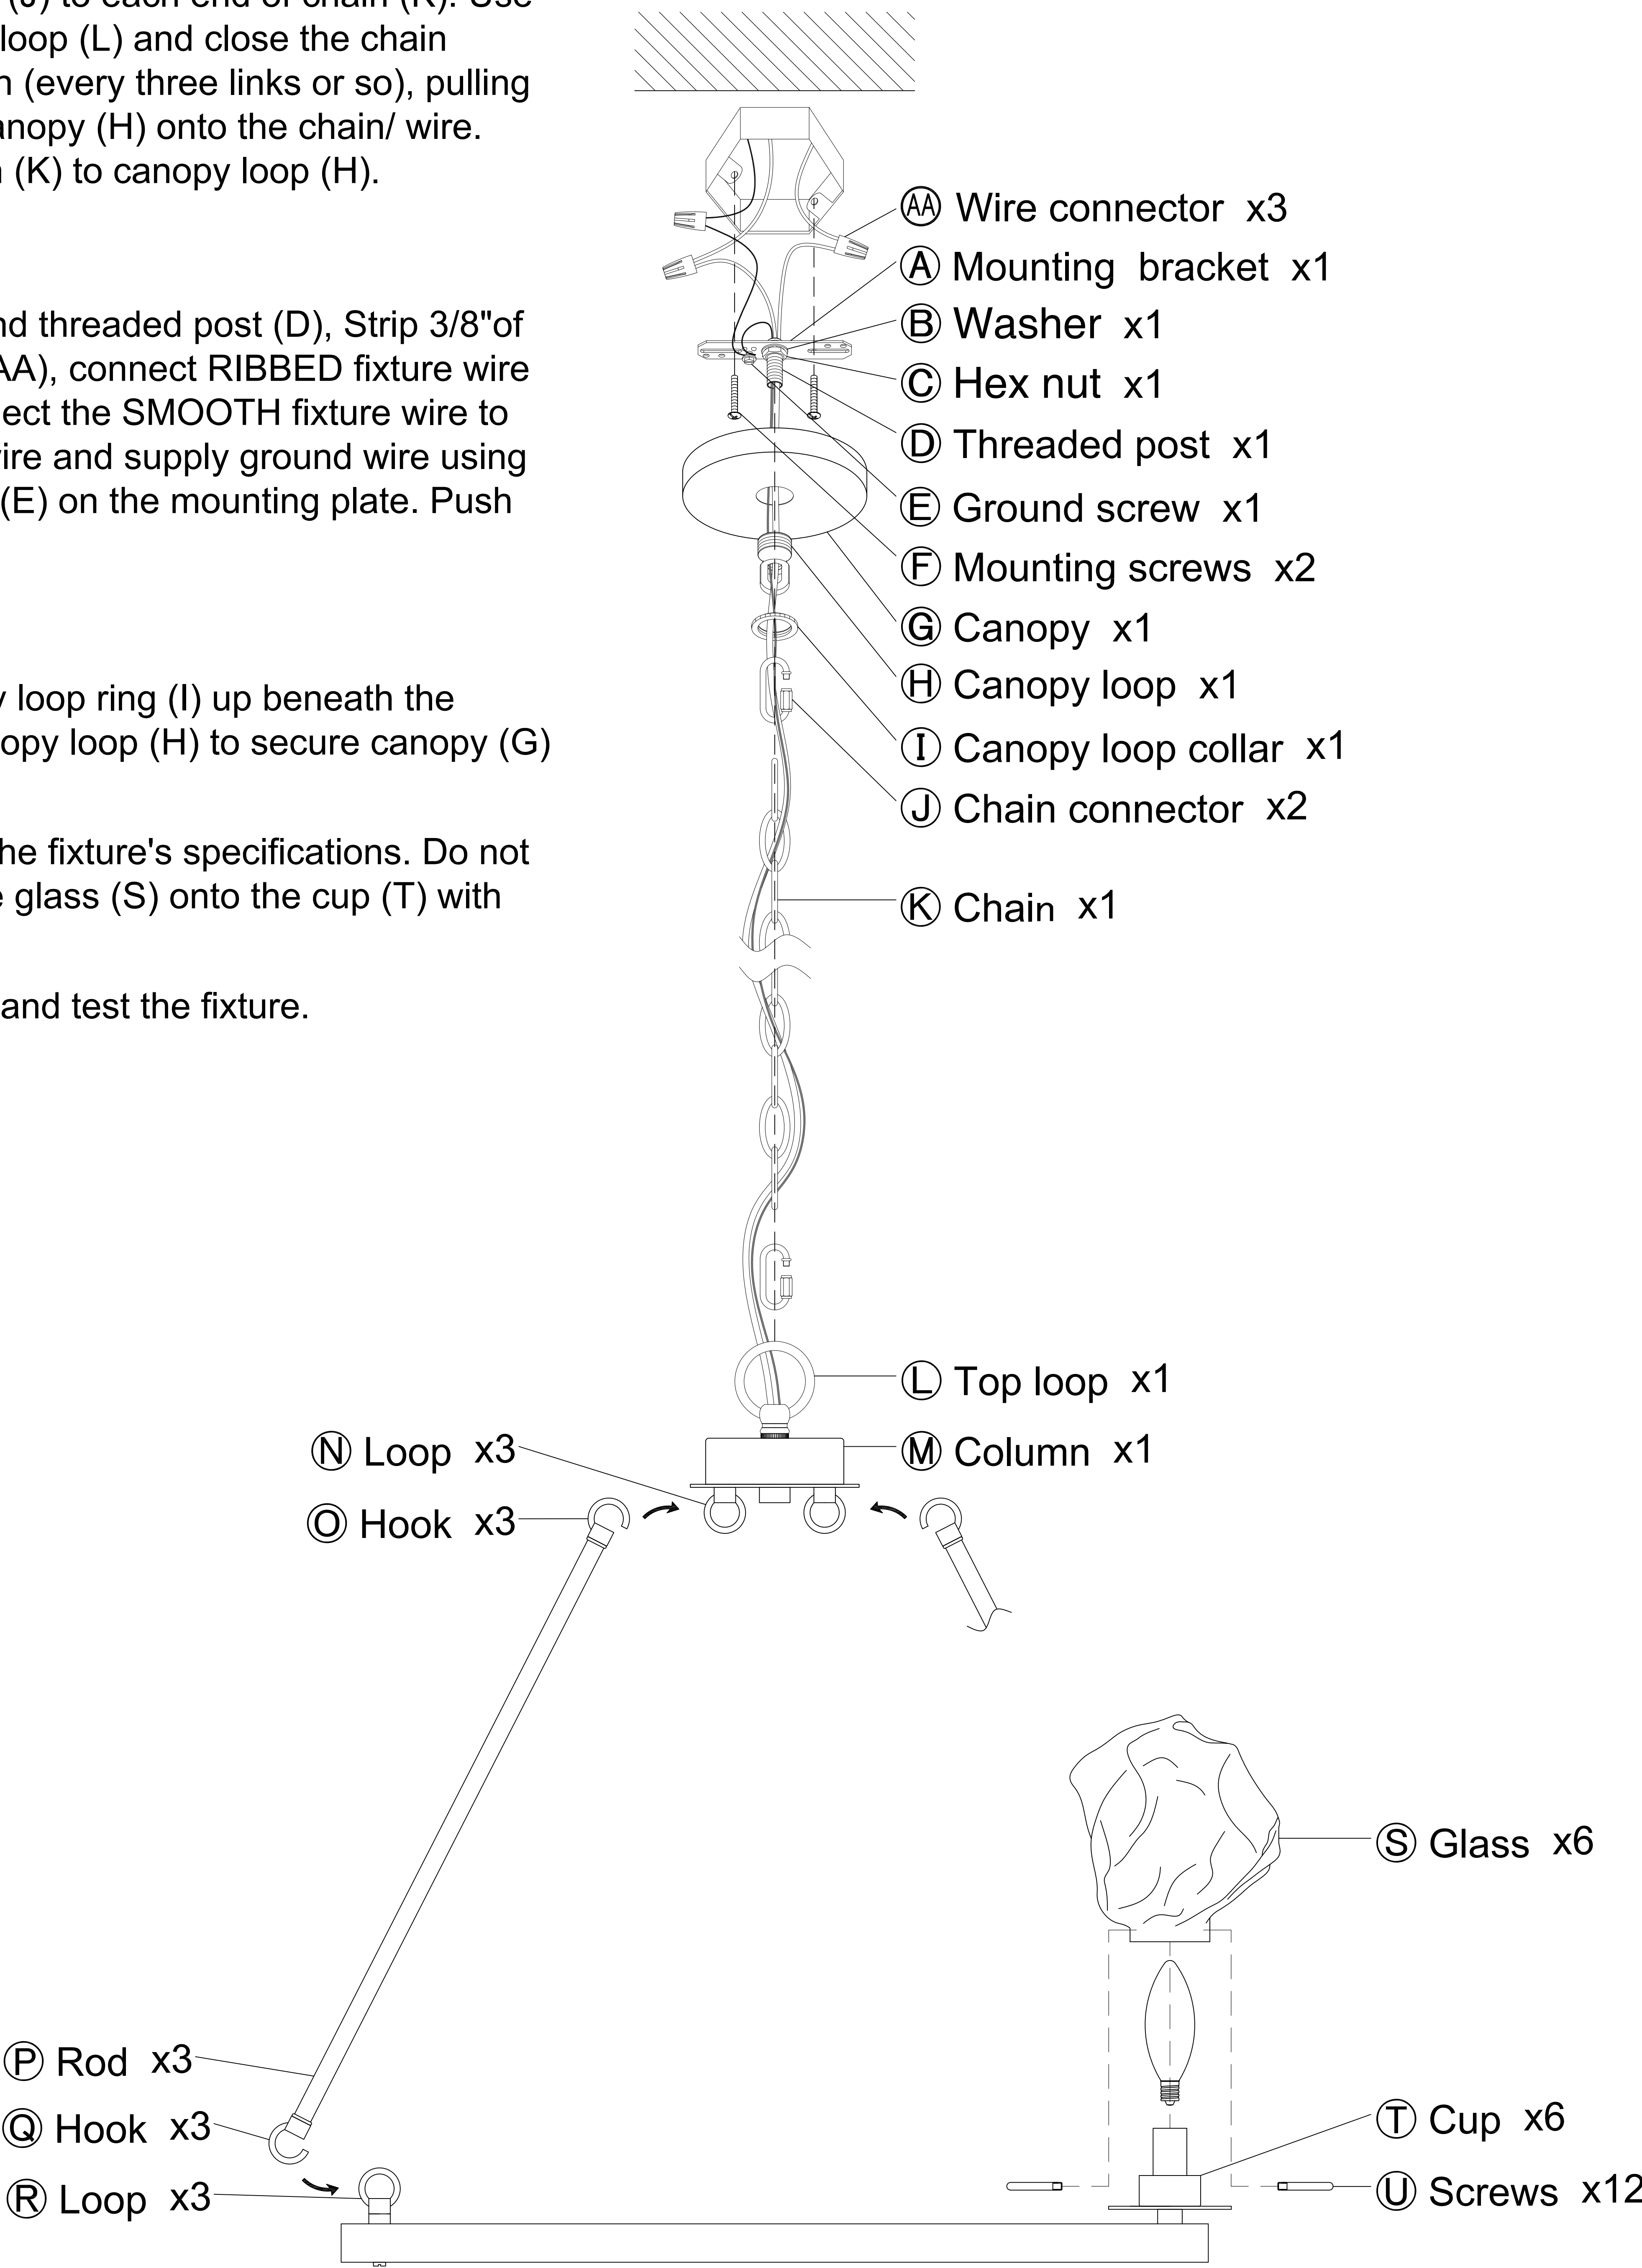
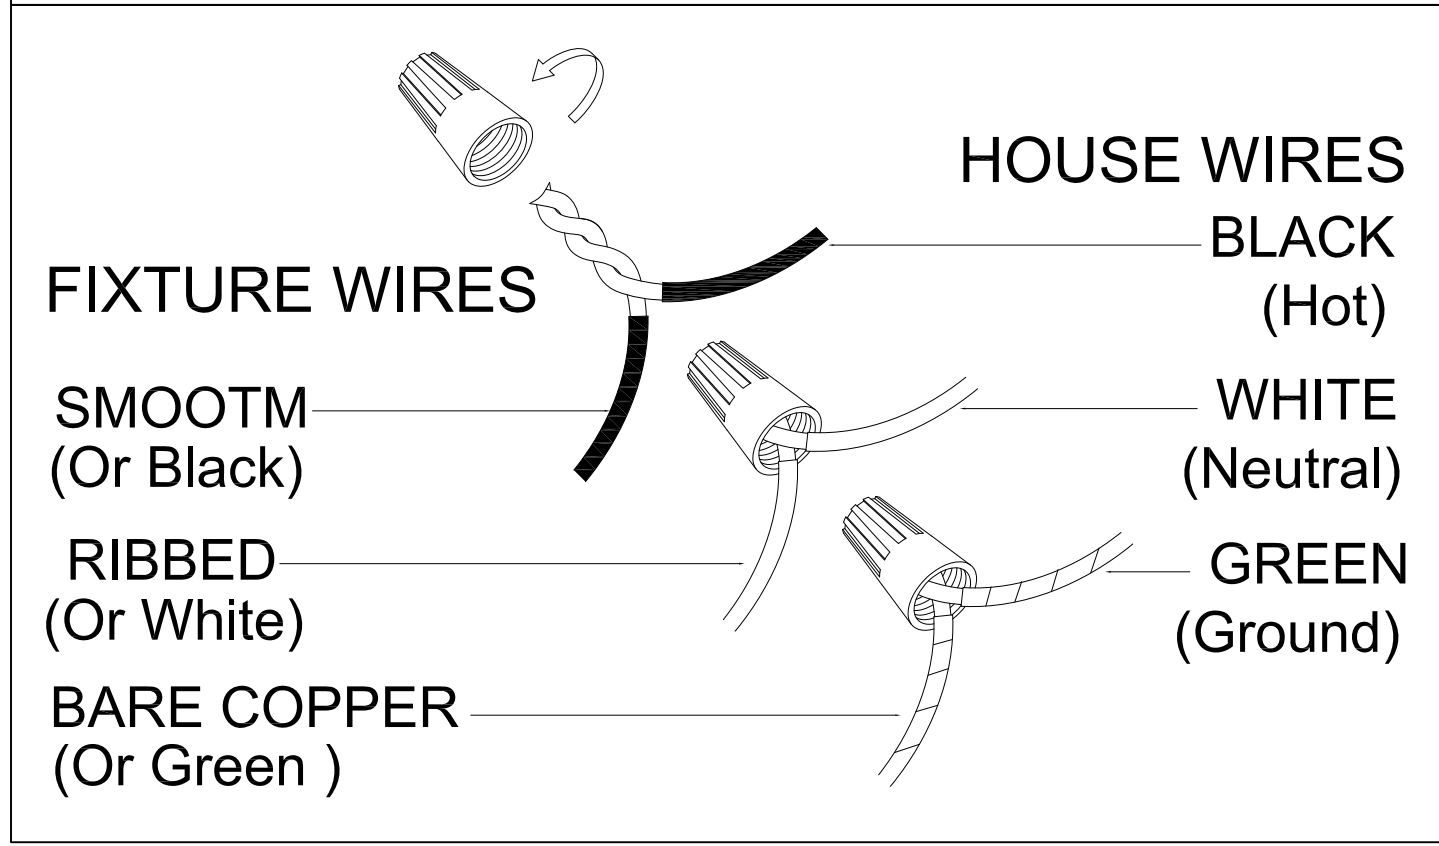
FINISHING THE INSTALLATION

5. Push canopy (G) up to the ceiling and slide canopy loop ring (I) up beneath the canopy. Tightly thread canopy loop collar (I) onto canopy loop (H) to secure canopy (G) in place.
6. Install light bulb (not included) in accordance with the fixture's specifications. Do not exceed the recommended maximum wattage. Secure glass (S) onto the cup (T) with screws (U).

Your installation is now complete. Turn on the power and test the fixture.

Accessory package

Ⓐ Wire connector		x3
Ⓐ Mounting bracket		x2
Ⓑ Washer		x1
Ⓒ Hex nut		x1
Ⓓ Threaded post		x1
Ⓔ Ground screw		x1
Ⓖ Mountingscrews(#8-32*25mm)		x2
Ⓗ Canopy loop		x1
Ⓘ Canopy loop collar		x1
Ⓙ Chain connector		x2
Ⓚ Chain		x1



CLEANING TIPS

Treat the fixture gently! Regular cleaning will reduce the need for deep cleaning. For regular cleaning, turn off the light and wipe down the fixture with a clean lint-free cotton or microfiber cloth. Never spray cleaner directly onto the fixture. Dry with a lint-free or microfiber cloth.